


(A) To connect your Digital Decoder to your Home Theater Equipment (Analog Dolby Pro-logic receiver).

Instructions :

1. Connect cable from wall to cable "IN" on your Digital Box.
2. Using RCA cables, connect your Digital Decoder video and audio "OUT" to your VCR video and audio "IN".
3. Using RCA cables, connect your VCR's video and audio "OUT" to your Audio/Video receiver's video and audio "IN".
4. Select your VCR video input (in need of help consult your VCR's user guide)
5. Using RCA cables, connect your DVD audio and video "OUT" (if you have one) to your Audio/Video receiver's audio and video "IN".
6. Connect RCA cable from your Audio/Video receiver "VIDEO OUT" to your TV "VIDEO IN".

Special notes :

1. RCA cables are not supplied by COGECO, visit your local retailer to obtain these items.
2. If you do not own a DVD player you can skip step 5.
3. Optional audio connections between Audio/Video receiver and TV can be used for your TV's speakers.
4. This configuration will only allow you to record programs on the channel that you are going to watch. To record a different program from the one you are tuned in, consult *Configuration to allow recording digital channel while watching another channel (analog ordigital)*.

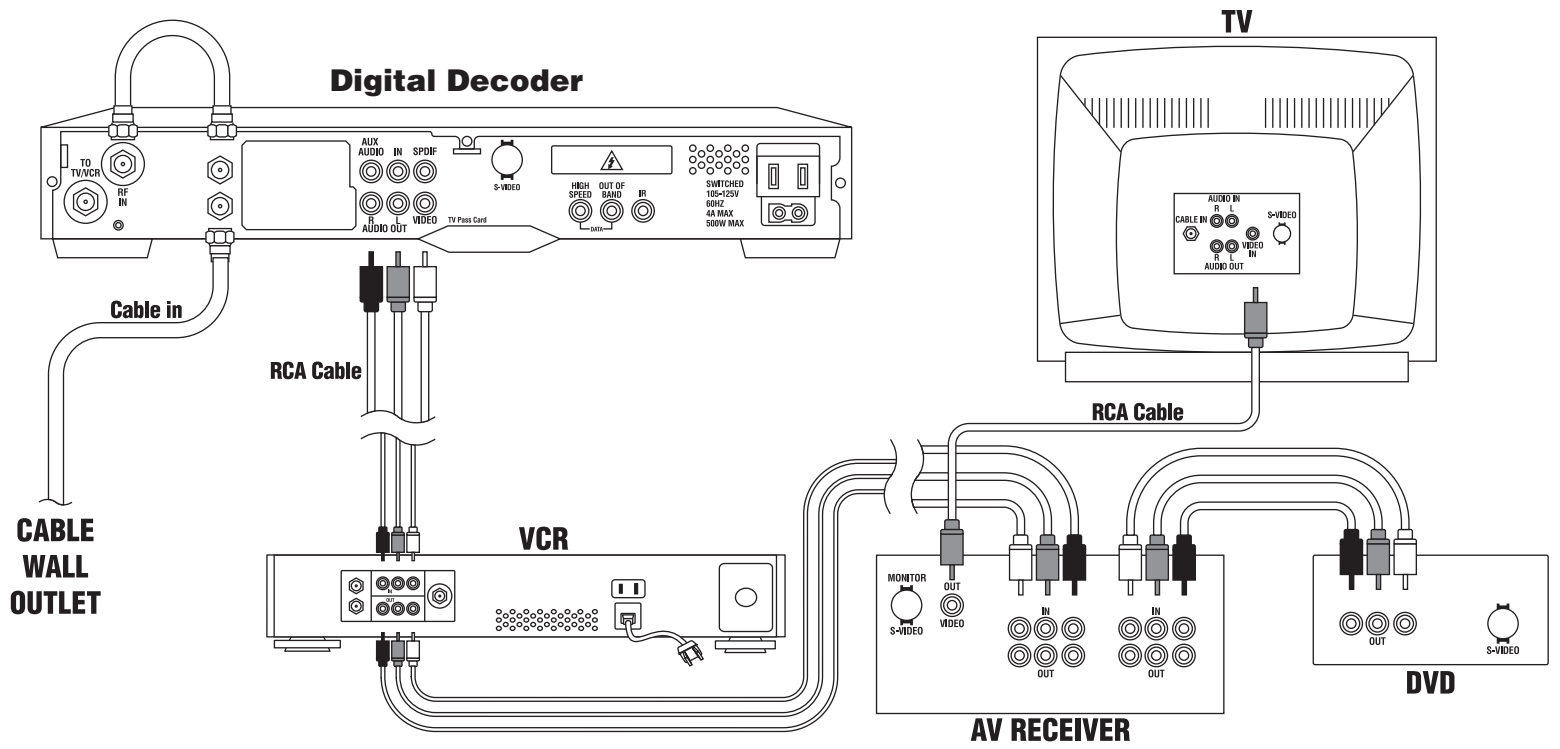

Your VCR and Video game system must be connected directly to your TV. This way you will avoid spoiling the quality of your Digital Decoder's signal.