 


**User's Guide  
for the**

**UY4DIGI  
UY4DIGI-P  
UY4DIGI-S**

**4-in-1 Remote Control**  
featuring *Memory Lock™*

www.uselectronics.com

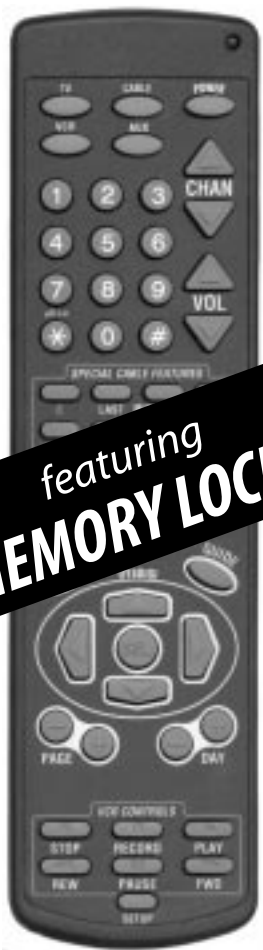

**before you begin**

If you have a TV with a remote control, we recommend that you plug its power cord directly into a wall outlet if available (your cable installer may select an alternate setup).

Make sure to set your TV to channel 2, 3, or 4 as directed by your cable company.

**I N F O** *Memory Lock™* is an exclusive technology that saves the device codes that are programmed into the remote, even when the batteries are removed.

**installing batteries**

Before you can program or operate the remote control, you must install two AAA Alkaline batteries.

**Step 1**

 
Remove the battery compartment cover on the back of your remote control.

**Step 2:**

Check battery polarity carefully, and install the batteries as shown in the illustration below.

**Step 3:**

Replace the battery compartment cover.

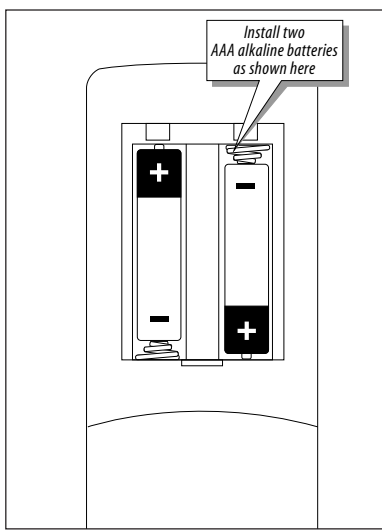

**button functions**

**cable box function keys**

See the chart below for a description of the key functions.



Cursor Keys

**MORE INFO**

**device/number keys**

- Device keys select what device the buttons on the remote will operate.
- Number keys allow you to enter the channel you want to view. You will also use them to setup the remote.



**vcr controls**

These keys operate standard VCR functions. **Operating Note:** Press the [RECORD] button (or the [EPG RECORD] button) twice to start recording on your VCR.



The chart below shows the functions of special keys for your cable box and program guide. See the cable box manual for further details.

* (HELP)	displays help for the on-screen display	<b>NOTE</b> Depending on the configuration of your cable box, certain functions listed here may or may not be functional.
# (FAV)	cycles through your favorite channels	
A/THEME	future use	
LAST	recalls the last channel that was viewed	
MUSIC/ENTER	switches between cable TV and Music Choice™	
MUTE	turns volume off	
B/LIST	future use	
EXIT	exits the on-screen display menus	
PPV	displays pay-per-view options	
SWITCH	switches between cable inputs on a dual-cable system	
C/CANCEL	future use	
INFO	displays channel and program information	
MENU	displays the main on-screen display menu	
GUIDE	displays the program guide	
SEL	selects various options and tunes programs from the program guide	
<b>CURSOR KEYS</b>	navigate through on-screen guides (see the highlighted section above)	
PAGE +/-	pages through on-screen menu and program guide screens	
DAY +/-	moves the program guide one day forward and backward	

US Electronics provides these function descriptions as a general guide to allow you to become more familiar with your cable box. Refer to your cable box manual for descriptions of specific functions.

**setting up your remote control**

Before you get started, find the red buttons labelled [VCR], [TV], and [CABLE] at the top of the remote control. In this section we'll refer to each of these buttons as a [DEVICE] buttons. Each time you see [DEVICE] button in the in this section, press the appropriate button for the device that will be operated by the remote (TV, VCR, Cable Box, etc.). Next, find the [SETUP] button at the bottom of the remote control. Once you are familiar with the location of the buttons, continue below.

**1. for your VCR, TV, and cable box**

Press the [DEVICE] button, then the [SETUP] button on the remote.

Enter the 3-digit device code for your brand of device listed in the charts on the other side of this manual by pressing the appropriate buttons on the numeric key pad.

Press the [SETUP] button again to save the code. The red indicator light at the upper right-hand corner of your remote will flash 3 times if these steps were followed correctly.

Press the [POWER] button to test the code you've entered. The device should turn ON or OFF each time the [POWER] button is pressed. If the device doesn't turn ON and OFF, repeat this setup procedure with the next code listed for the device.

**2. for a digital music terminal (optional)**

Press the [AUX] button, then the [SETUP] button on the remote.

Enter the 3-digit device code for your type of digital music terminal by pressing the appropriate buttons on the numeric key pad.

**Jerrold DCR1000** .....000  
**Scientific-Atlanta DMX** .....002

Press the [SETUP] button again to save the code. The red indicator light at the upper right-hand corner of your remote will flash 3 times if these steps were followed correctly.

Press the [AUX] button again to test the code you've entered. The device should turn ON or OFF each time the [POWER] button is pressed. If the device doesn't turn ON and OFF, repeat this setup procedure with the next code listed for the device.

**3. for an auxilliary device (optional)**

The red [AUX] button allows you to control a or a second TV or VCR if you aren't using it for a digital music terminal. To do this, you need to setup the [AUX] button so it functions like a second [TV] or [VCR] button.

Press the [SETUP] button, then the [MENU] button on the remote.

Now, press the [AUX] button, and then the button that you want the [AUX] button to emulate (either the [TV] or [VCR] button), then press the [SETUP] button. The red indicator light at the upper right-hand corner of your remote will flash 3 times if these steps were followed correctly.

The [AUX] button can now be programmed to control the specific device. Follow the instructions above in step 1 and press the [AUX] button any time you are told to press the [DEVICE] button.

**Helpful Hint**

The setup code for the GI/Jerrold™ DCT1000 and CFT2200™ series cable boxes is:

**002**

Jerrold™ is a trademark of GIC Corp.

## cable box code

 
The setup code for the GI/Jerrold™ DCT1000 and CFT2200™ series cable boxes is:

**002**

Jerrold™ is a trademark of GIC corp.

## helpful hint

Once you have found your TV, VCR, and Cable Box codes, write them down for safe keeping on the code sticker that's *inside* the battery cover (see illustration below). Attach the "Quick Programming Instructions" sticker to the outside of the battery cover.

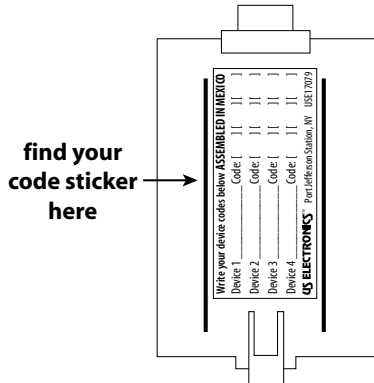

## notes

## television codes

If your TV is made by one of the manufacturers listed to the right, try that code first. Otherwise, find your code in the chart below.

GE	003	JVC	009	Magnavox	006	Mitsubishi	007
NEC	010	Panasonic	002	Philips	006	Pioneer	008
Proscan	003	RCA	003	Sony	005	Zenith	004

<b>AOC</b>	010   019	<b>GE</b>	025   033   035	<b>Mitsubishi Monitor</b>	016	<b>Sharp</b>	028   046   057   066
<b>Candle</b>	010   031   036   081	<b>Goldstar</b>	012   019   036	<b>MTC</b>	010   019   036   037	<b>Sony</b>	005   015   042
<b>Capehart</b>	034	<b>Harman Kardon</b>	043	<b>NEC</b>	010   019   036   068	<b>Soundesign</b>	019   079
<b>Citizen</b>	010   027   031   036 037   045   079	<b>Hitachi</b>	029   038   047   049 053   056   070   083	<b>Panasonic</b>	002   006   033   035   065	<b>SSS</b>	019   075
<b>Concerto</b>	031	<b>Infinity</b>	006	<b>Penney</b>	001   003   010   019   021   055	<b>Sylvania</b>	006   010   020   022 024   038   079   080
<b>Conklin</b>	000	<b>JBL</b>	006	<b>Philco</b>	006   010   019   020 022   024   079   080	<b>Tatung</b>	032
<b>Contec</b>	028   062   075   078	<b>Jensen</b>	032	<b>Philips</b>	006	<b>Techwood</b>	036
<b>Craig</b>	064   075	<b>JVC</b>	009   063	<b>Pioneer</b>	008   069	<b>Teknika</b>	007   018   019   027 031   036   037   043 071   074   075   079
<b>Curtis Mathes</b>	010   037 075	<b>Kloss Novabeam</b>	022	<b>Proscan</b>	003	<b>TMK</b>	019   036
<b>CXC</b>	075	<b>KTV</b>	075	<b>Proton</b>	019   026   034	<b>Toshiba</b>	054   058
<b>Daewoo</b>	019   027   039   040   045	<b>Logik</b>	018	<b>Quasar</b>	034   035   081	<b>Universal</b>	021   023
<b>Dixi</b>	011	<b>Luxman</b>	036	<b>Radio shack</b>	027   066   075	<b>Vidtech</b>	019
<b>Dynatech</b>	031	<b>LXI</b>	054	<b>RCA</b>	001   003   019   029	<b>Wards</b>	006   010   018   019 020   021   023   024 066   074   080
<b>Emerson</b>	000   019   074   075 076   078   085	<b>Magnavox</b>	006   010   017   022 024   046   079   080	<b>Sampo</b>	010   034	<b>Yamaha</b>	019
<b>Envision</b>	010	<b>Marantz</b>	010	<b>Samsung</b>	010   019   027   036   037	<b>Zenith</b>	004
<b>Fisher</b>	058	<b>MGA</b>	007   010   019   059	<b>Sanyo</b>	051   055   060   084		
<b>Funai</b>	074   075	<b>Mitsubishi</b>	007   016   019 028   050   059	<b>Scott</b>	074		
<b>GE</b>	003   021   023			<b>Sears</b>	017   054   055 058   067   074		

## vcr codes

If your VCR is made by one of the manufacturers listed to the right, try that code first. Otherwise, find your code in the chart below.

GE	001	Hitachi	006	JVC	040	Magnavox	008
Mitsubishi	010	Panasonic	001	NEC	023	Proscan	007
RCA	007	Sony	018	Toshiba	009	Zenith	004

<b>Akai</b>	026   030   034   049	<b>Grundig</b>	008	<b>Pentax</b>	006   038	<b>Sylvania</b>	001   010
<b>Alba</b>	016	<b>Harman Kardon</b>	023   043	<b>Philco</b>	001	<b>Symphonic</b>	005
<b>Altec</b>	004	<b>Hitachi</b>	005   006   026	<b>Philips</b>	008	<b>Tatung</b>	026
<b>Amstrad</b>	005	<b>ITT</b>	026   049	<b>Pioneer</b>	036   040	<b>Teac</b>	005   026
<b>ASA</b>	008   022	<b>JCL</b>	001	<b>Portland</b>	016	<b>Teknika</b>	001   005   022   033
<b>Broksonic</b>	061	<b>Jensen</b>	026	<b>Proscan</b>	007	<b>Telefunken</b>	026
<b>Canon</b>	001	<b>JVC</b>	013   026   040	<b>Quasar</b>	001   047	<b>Thomson</b>	026
<b>Craig</b>	028   063	<b>Kenwood</b>	026   027   040	<b>RCA</b>	001   002   006   007	<b>Thorn</b>	026
<b>Curtis Mathes</b>	001	<b>Lloyd</b>	005	<b>Realistic</b>	001   005   022   027 028   029   048   063	<b>TMK</b>	021
<b>Daewoo</b>	009   015   016   045	<b>Magnavox</b>	001   008	<b>Saba</b>	026	<b>Toshiba</b>	009   010   026
<b>Daytron</b>	016	<b>Marantz</b>	001   008   023	<b>Saisho</b>	046   058	<b>Totevision</b>	022   063
<b>Dual</b>	026	<b>Marta</b>	022	<b>Salora</b>	010	<b>Uni-Logic</b>	000
<b>Dynatech</b>	005   029	<b>MEI</b>	001	<b>Samsung</b>	009   032   063	<b>Unitech</b>	063
<b>Emerson</b>	005   021   020   037   041   046 050   057   058   060   061	<b>MGA</b>	010   037	<b>Sansui</b>	026   040	<b>Vector Research</b>	023
<b>Ferguson</b>	026	<b>Minolta</b>	006	<b>Sanyo</b>	027   028	<b>Video Concepts</b>	023
<b>Finlux</b>	005   008	<b>Mitsubishi</b>	010   037   062	<b>Schaub Lorenz</b>	026	<b>Videosonic</b>	063
<b>Fisher</b>	028   035   039	<b>MTC</b>	005   063	<b>Scott</b>	009   061	<b>Wards</b>	005   029   063
<b>Funai</b>	005	<b>Multitech</b>	005   042	<b>Sharp</b>	029	<b>Yamaha</b>	023   026
<b>GE</b>	001   007	<b>NEC</b>	023   026   031   040	<b>Shintom</b>	042	<b>Zenith</b>	018   019   024
<b>Goldstar</b>	022   023	<b>Normende</b>	026	<b>Sony</b>	014   017   018   019		
<b>Graetz</b>	026	<b>Panasonic</b>	001   003				
		<b>Penney</b>	001   006   023				

## troubleshooting guide

### ? Problem

I programmed the remote, but it won't work my TV, VCR, or Cable Box.

### 😊 Solution

You may have entered the wrong code (or the correct code might not be listed). Try entering all of the device manufacturer's codes again, starting with the manufacturer's popular code if one is available.

If you are still unable to operate your device, follow the instructions in the section titled **CodeScan™**.

Weak batteries may cause the remote to only operate one device. If this happens, simply replace them with **NEW** alkaline batteries and reprogram the remote. If you are sure the batteries are good, try rolling them with your finger to ensure a good connection.

### ? Problem

My remote control doesn't operate my combination TV/VCR.

### 😊 Solution

Most combination TV/VCRs have VCR tuners in them. You will need to select a code from the VCR section that will power up your TV/VCR. If this is the case, you probably won't need to use a TV code. Also, to control volume with your remote control, you must program the remote for the cable box last.

## CodeScan™

If none of the codes listed for your Cable Box, TV, or VCR works, the CodeScan™ method will allow you to cycle through all the available codes in the remote until you find the right Cable Box, TV, or VCR code.

### step 1

Manually turn ON power to the device you want to program the remote for (Cable Box, TV, or VCR).

### step 2

the right arrow key



Point the remote control at the device, and press the following keys:

**[the device button]**(the red buttons at the top of the remote), **[SETUP]**, **[the right arrow key]**, then the **[POWER]** button.

If the device is still ON, continue at step 3 below. If it turns OFF, press **[SETUP]** again to store the code you just selected, and you're all done. The red indicator light at the upper right-hand corner of your remote will flash 3 times if these steps were followed correctly.

### step 3

Press **[the right arrow key]**, then the **[POWER]** button until the device turns OFF. When the device turns OFF, press **[SETUP]** to save the code.

Please be patient — there are about 90 possible codes.